

PRO-MIC

PRO-MIC Roll Measurement Systems

Reliability, Repeatability and 3 Button Operation

PRO-MIC Bluetooth Wireless Charger/Interface

PRO-MIC Wireless Charger/Interface Communication:

The PRO-MIC Bluetooth Wireless Charger/Interface Option modifies the PRO-MIC Charger/Interface to provide wireless communication between the Charger/Interface and your PC running PRO-MIC Quantum software.

With this option, you can download PRO-MIC data from your Digital PRO-MIC wirelessly through the Charger/Interface to your PC.

This setup is common when the PC is located in the shop office or other central location. The PRO-MIC remains on the charger at the grinder while the data is transferred wirelessly to the remote PC. Avoiding the need to place a PC at the grinder.

Additional Details:

Requires PRO-MIC Digital Electronics or PRO-MIC PRO-FILER (TN-003).

Requires 5000 Series Charger/Interface.

USB Wireless Adapter included for use at your PC.

Standard equipment communicates up to 100 meters, optional boosted antennas up to 1000 meters.

Please contact PRO-MIC at 1-800-PRO-MIC-1 or info@pro-mic.com with any questions.



PRO-MIC Bluetooth Wireless Charger/Interface



Desktop PC Hardware
Communicating Wirelessly with Charger/Interface



PRO-MIC PDL Desktop Fanless Workstation (See TN-054)
Harsh Environment PC Built by PRO-MIC